


APPLY SOLOMAN APPLE RED DYE #417 IN LIQUID FORM TO TOP OF CONCRETE.  
PLACE SAFETY/CUT TAPE 12" ABOVE THE DUCTBANK.

COPPERHEAD TRACER WIRE (RED)

3500 PSI CONCRETE

#4 REBAR (TYPICAL) SPACED AND TIED AS SHOWN WITH A MINIMUM OF 12" OVERLAP OR 40X THE REBAR DIAMETER.

3.625"X3.625"X15.625" HOLLOW CONCRETE BLOCK BASE FOR SPACERS. RUN #4 REBAR THROUGH HOLES THEN FILL BLOCK CAVITIES WITH CONCRETE.

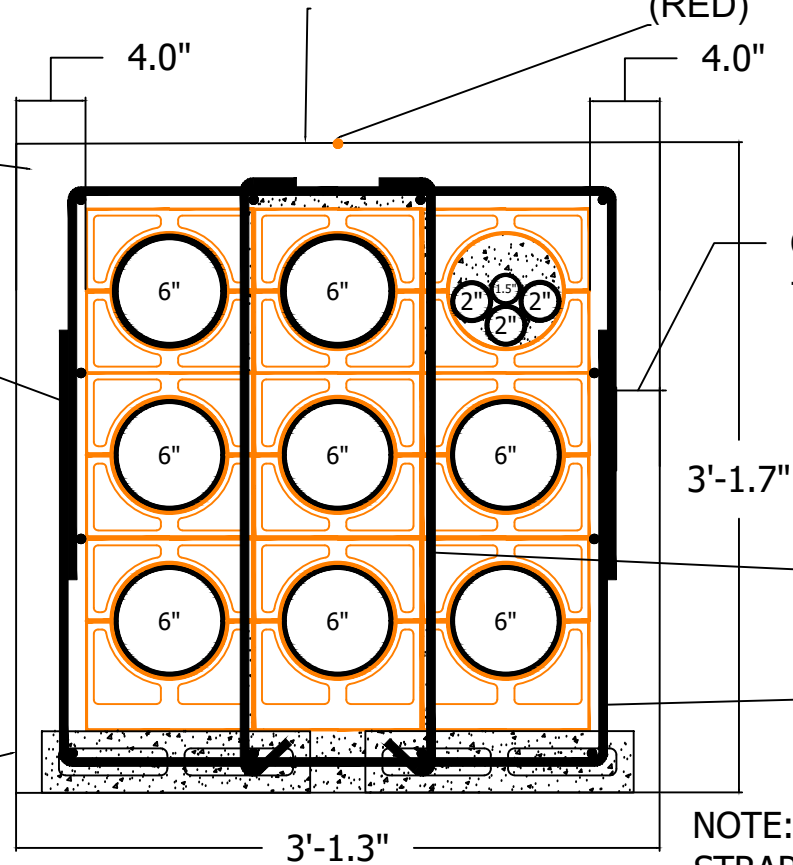

3" CLR TYP

3'-1.7"

#4 TIES AT 12'-0" O.C.

CONDUIT SPACERS AND #4 TIES AT 6'-0" O.C.

NOTE:  
STRAP CONDUIT TO SUPPORTS USING PLASTIC CABLE TIES. DO NOT USE WIRE.  
EXTERIOR DIMENSIONS ARE MINIMUMS.

DATE	ISSUE

DRAWN BY: TDA  
CHECKED BY: JR  
APPROVED BY: NA  
DATE: 6/18/2018  
PROJECT #: NA  
SCALE: NTS

PRIMARY  
DUCT BANK  
PROFILE  
AND NOTES